

## iPECS Gateway Module Initial Setup

### Finding the IP address

The default IP addresses are below

BRIM 10.10.10.253

DTIM 10.10.10.250

LGCM 10.10.10.249

SLTM8 10.10.10.248

SLTM32 10.10.10.247

MCIM 10.10.10.245

WTIM 10.10.10.242


PRIM 10.10.10.252

VOIM8, VCIM 10.10.10.244

VOIM24 10.10.10.243

Set up your Lan Adapter (NIC) to an IP address not to conflict with the gateway such as 10.10.10.199  
255.255.255.0

Try to connect with your web browser

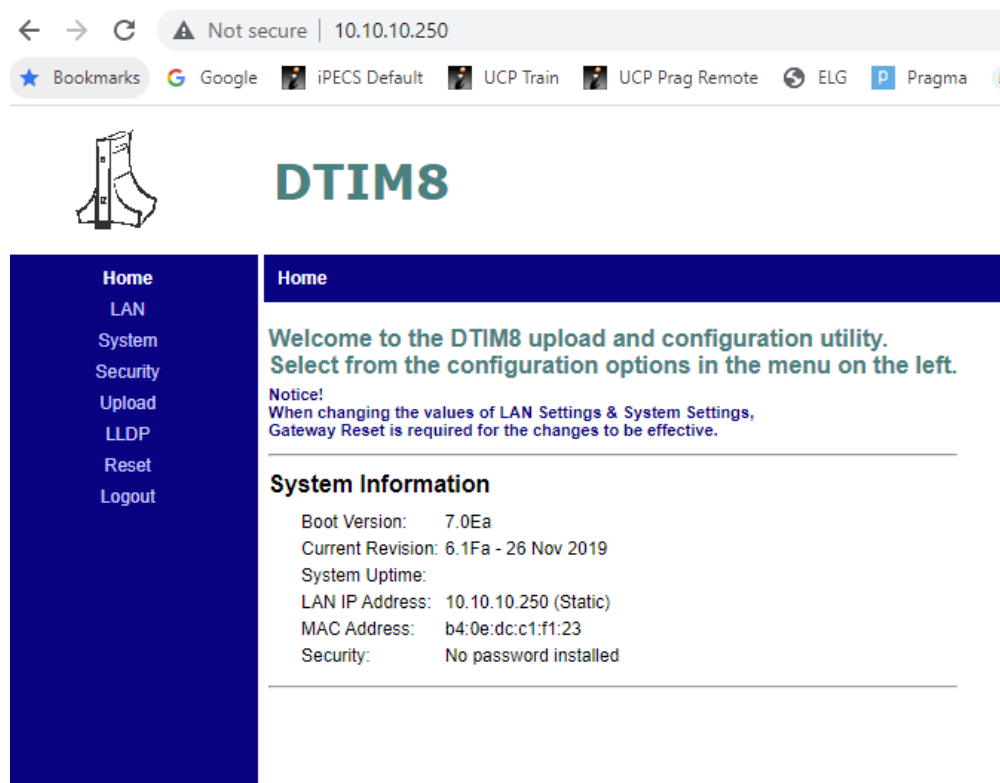

The screenshot shows a web browser window with the address bar set to 10.10.10.250. The browser's bookmark bar includes links for Google, iPECS Default, UCP Train, UCP Prag Remote, ELG, and Pragma. The main content area displays the DTIM8 logo and a navigation menu on the left with options: Home, LAN, System, Security, Upload, LLDP, Reset, and Logout. The main content area has a dark blue header with 'Home' and a welcome message: 'Welcome to the DTIM8 upload and configuration utility. Select from the configuration options in the menu on the left.' Below this is a 'Notice!' section stating: 'When changing the values of LAN Settings & System Settings, Gateway Reset is required for the changes to be effective.' A 'System Information' section follows, listing: Boot Version: 7.0Ea, Current Revision: 6.1Fa - 26 Nov 2019, System Uptime, LAN IP Address: 10.10.10.250 (Static), MAC Address: b4:0e:dc:c1:f1:23, and Security: No password installed.

If you cannot connect try an IP scanner to find IP address